



Dear user of Walkstool,

Things to be aware of when replacing the center piece (metal part):

- The center piece is being turned 180 degrees in the plastic joints to lock.
- This means that at least two of the plastic joints need to be removed from Walkstool to be able to remove the center piece and attach a new one.

We advise you to do the following when replacing the center piece on Walkstool:

- Remove the lower legs completely from Walkstool. When in locked position, push the red spring and pull out the lower legs. Do note: If the center piece is broken and/or the leg is not attached, you may have to push the red spring from both sides simultaneously to detach it from the plastic joint.
- Remove two plastic joints from the upper legs without damaging the aluminum tubes.
- Remove the center piece and the two plastic joints from the plastic joint that is still attached to Walkstool.
- Attach the new center piece with two new plastic joints – and after that to the third plastic joint on Walkstool (remember that all plastic joints need to be locked to the center piece by turning 180 degrees).
- Use a rubber hammer to attach the two plastic joints on the upper legs. On every stroke, pay extra attention that the plastic joint is in a straight position when attaching it to the upper leg.
- Insert each lower leg into the upper legs by pushing both sides of the red plastic spring.

Best regards,
Scandinavian Touch AB



Headoffice

SCANDINAVIAN TOUCH AB
BJÖRKALLÉN 17, SE-142 66 TRÅNGSUND, SWEDEN
PHONE +46 8 676 07 00
www.walkstool.com


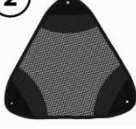




Production & Administration





SCANDINAVIAN TOUCH AB
LINDHAGSGATAN 5C, SE-531 40 LIDKÖPING, SWEDEN
PHONE +46 510 54 77 99
E-MAIL info@walkstool.com




Walkstool®

Comfort models



①	②	③	④	⑤	⑥
					
Plastic stud	Seat	Plastic cup	Upper leg	Plastic joint	Center piece

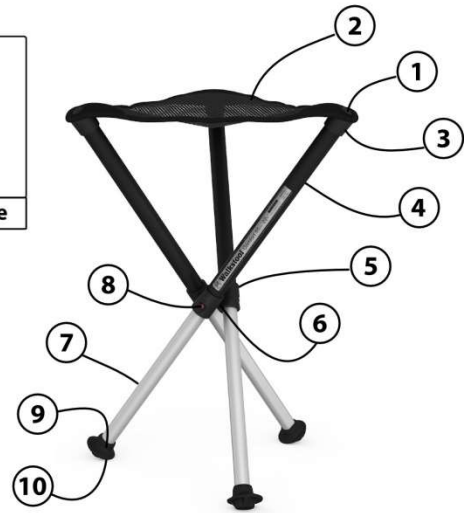


⑦	⑧	⑨	⑩
			
Lower leg	Red spring	Plastic end	Rubber foot



Walkstool®

Basic models

①	②	③	④	⑤	⑥
					
Plastic stud	Seat	Plastic cup	Upper leg	Plastic joint	Center piece

⑦	⑧	⑨
		
Lower leg	Red spring	Plastic foot

